

TROPITONE®



GARDEN PLANTER

TROPITONE®

GARDEN PLANTER



ASSEMBLY INSTRUCTIONS

Congratulations on the purchase of your Tropitone® Garden Planter. Please read all instructions carefully before assembling and using this product. Keep this guide for future reference.

CAUTION!


ASSEMBLED FURNITURE IS HEAVY. ASSEMBLE AT PLACE OF USE. Assemble furniture on a soft surface (i.e.: carpet, cardboard) to prevent scratches.

Do not assemble with electric tools, including battery powered ones.

Do not try to lift or flip furniture components with only one person. Components may be heavy and awkward to handle, and may result in injury to persons or damage to property if not lifted properly.

✓ Check that all hardware and components are provided before you start assembly.

REQUIRED TOOL(S)	HARDWARE	
		
Phillips #2 Screwdriver	(4) Washers	(4) Screws #12 x 2-1/2"

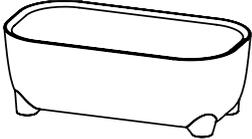COMPONENTS			
A 	B 	C 	D 
(1) Planter	(4) Teak Legs	(1) Perforated Inner Plate	(1) Filling Tube

NOTE: If a Garden Planter without legs was purchased, please skip Assembly Step One and continue to Assembly Step Two.

TROPITONE®


GARDEN PLANTER



ASSEMBLY STEP ONE


-  (4) #12 x 2-1/2"
-  (4)

1. Insert each of the 4 legs into the planter by aligning the holes.
2. Place (1) screw with (1) washer through the pre-drilled holes in the planter and leg. Fully tighten the screw.
3. Repeat for remaining (3) legs.

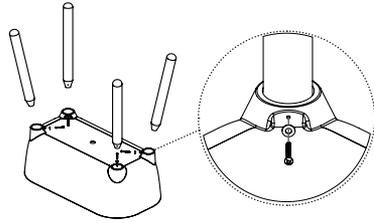


ASSEMBLY STEP TWO

1. Turn the planter upside down and place the perforated inner plate at the bottom and the filling tube, bevel down, in the provided hole.

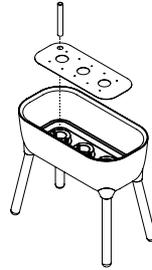

SELF-WATERING SYSTEM

1. Ensure the perforated inner plate and filling tube are in place.
NOTE: You can line the bottom and the 3 cavities with geotextile cloth (not included) to reduce the amount of soil moving through the product.
2. Fill one third of the planter with soil while ensuring the 3 cavities are filled.
3. Place your plants and fill up with soil ensuring the filling tube extends out by approximately 1".

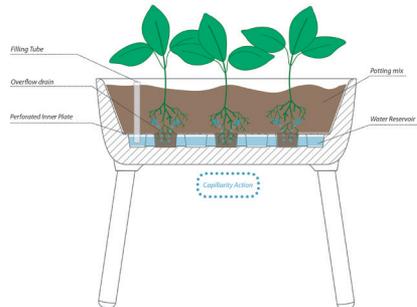

TROPITONE®

CARE INSTRUCTIONS

For care and cleaning instructions, refer to the Tropitone® Care, Maintenance, Safety & Warranty Information guide included with your furniture and available at tropitone.com/warranty.

CUSTOMER SERVICE

If you have difficulty understanding any of the instructions and need assistance while assembling your Garden Planter components, please call Tropitone's Customer Service Center at 949.951.2010.

Tropitone Furniture Co., Inc.
5 Marconi
Irvine, California 92618
949 951 2010
tropitone.com

Warranty

For our current Warranty and product care information, please visit tropitone.com/warranty
Part # R9T00054

©2019 Tropitone Furniture Co., Inc.
10/19